



LOW ALTITUDE ENROUTE CHART - ICAO CURAÇAO FIR

COMMUNICATION	
Aeroporto Hato (TNCC)	
Curaçao Control	124.1/127.1
Hato Approach	119.6
Hato Tower	118.3
Flemingo Airport (TNCA)	
Curaçao Control	124.1/127.1
Hato Approach	119.6
Flemingo Tower	118.7
Reina Beatrix Int'l Airport (TNCA)	
Curaçao Control	124.1/127.1
Beatrix Approach	120.9
Beatrix Tower	120.9

SPECIAL USE AIRSPACE	
TND - 5	surface / 10,000** Naval air exercises
TND - 6	surface / 27,000** Gunnery/missile firing
* by Notam	
All other special use airspace is identified on the Area Charts for Curaçao/Bonaire and Aruba	

NOTES	
- ABA VOR declination	10° W
- PJB VOR declination	11° W

LEGEND	
	11°W Isogonic line
	Area chart boundary
	On-demand reporting fix
	Compulsory reporting fix
	Fly-by on-demand reporting wpt
	Fly-over on-demand reporting wpt
	Fly-by compulsory reporting wpt
	Fly-over compulsory reporting wpt

CHANGES: Frequencies, name of service provider.